


Before installing view CEI standards on our website.
Note: Protection against electric shock available (earthing and bonding)

The installation should be done by an electrician.

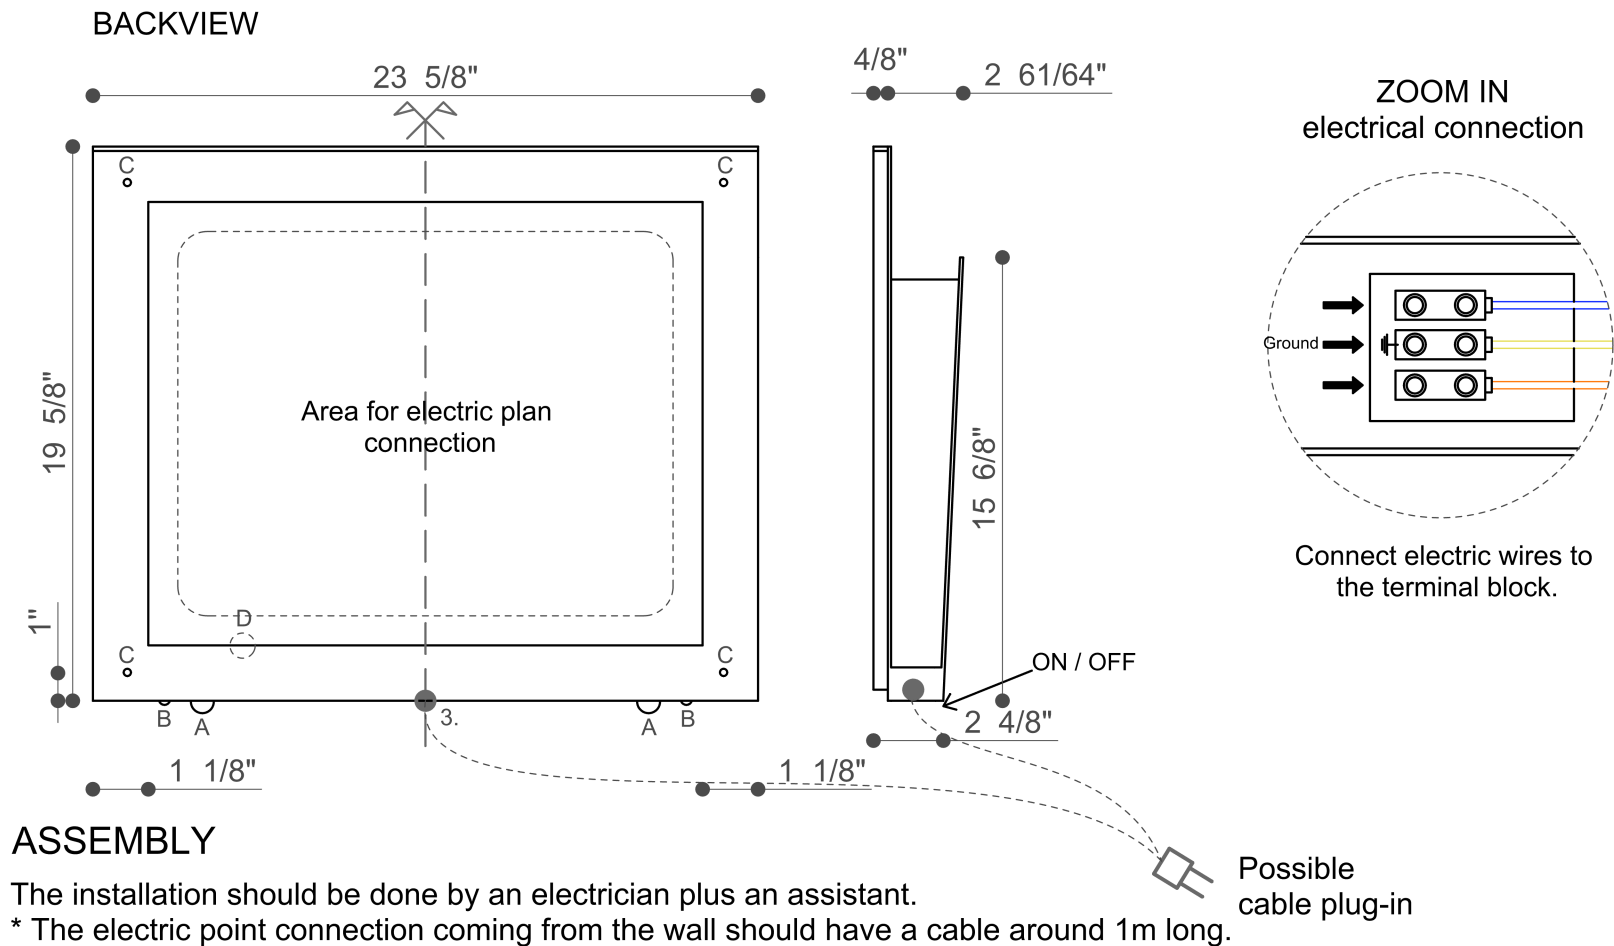

ASSEMBLY

The installation should be done by an electrician plus an assistant.

* The electric point connection coming from the wall should have a cable around 1m long.

1. Unscrew the two cross-shaped buttons (A) (marked red)
2. Unscrew the 2 fasteners (B) inside, below (marked blue)
3. Separate the frame from the body by sliding.
4. Fix the frame to the wall in desired position (C)
5. Do electrical connection by passing all cables through the hole (D) (marked yellow)
6. Place the towelwarmer over the frame and secure it by screwing the wall fixes, fasteners B (marked blue)
7. Close the inferior cover by re-screwing the cross-shaped buttons A (marked red)
8. Remove colored stickers

*All dimensions are in inches.