i geometrici | Superslim


Before installing check CEI standards on our website.
Note: Protection against electric shock available (earthing and bonding)
For additional security, two mirror supports are included.

The installation should be done by an electrician.


mg12

copyright® - MonicaGeronimi

mg12 S.r.l.
viale R.Margherita, 33
20122 Millano
tel. 0233605330

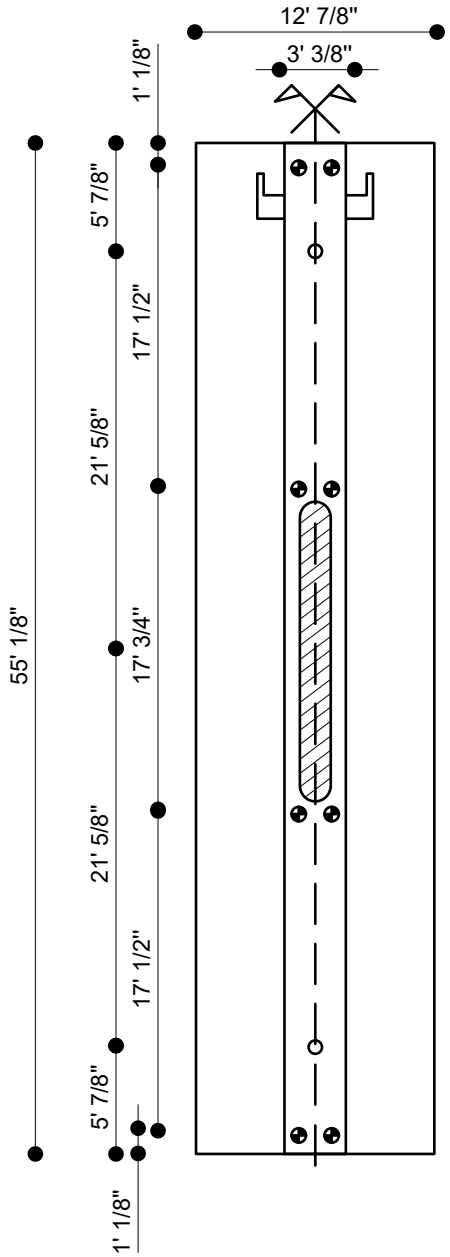

Frontal view

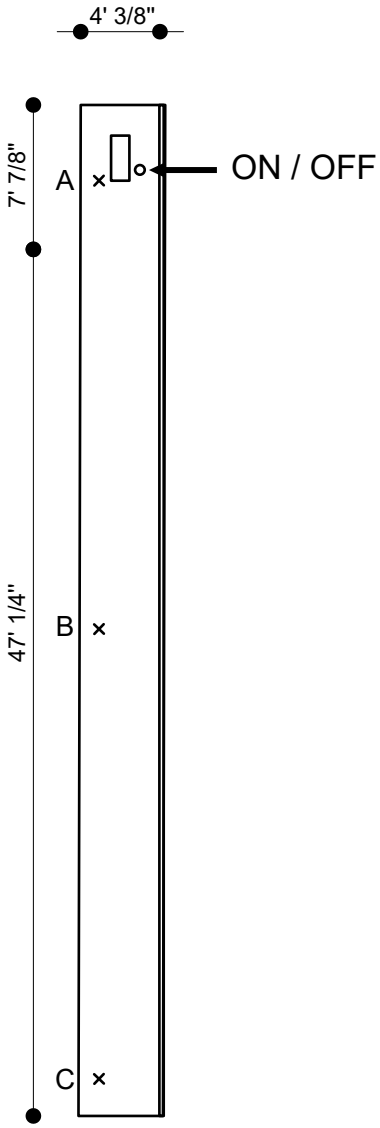


Lateral view

Instructions:

1. Unscrew screws A,B,C. Right and left.
2. Secure the body of the Towel warmer on the wall.
3. Make the connection electrician described below. ⁕
4. Replace the front cover.

⁕ ZOOM IN
Electrical connection

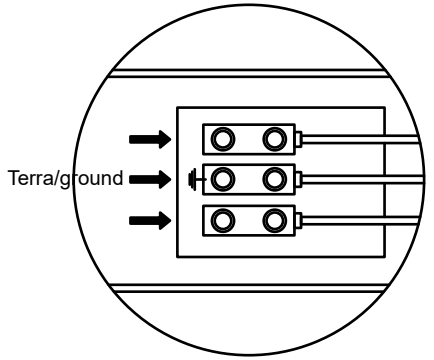

Connect electric wires to the terminal block.

- Hole for positioning of wall fixes. *
- Electrical connection holes options.
- Electrical connection holes options.

*all dimentions are expressed in inches.